




**SUMP15  
LS CONVERSION  
SUMP & PICK UP**

**\*\*IMPORTANT NOTICE\*\***

**THIS SUMP USES A "Z160" OIL FILTER**

***PLEASE NOTE YOU WILL ALSO NEED TO CLEAN THE  
INSIDE OF THE SUMP FOR FOREIGN OBJECTS***

To Relocate the LS Oil Dipstick you will need to Locate the welsh plug located on the right hand side near the factory starter motor.

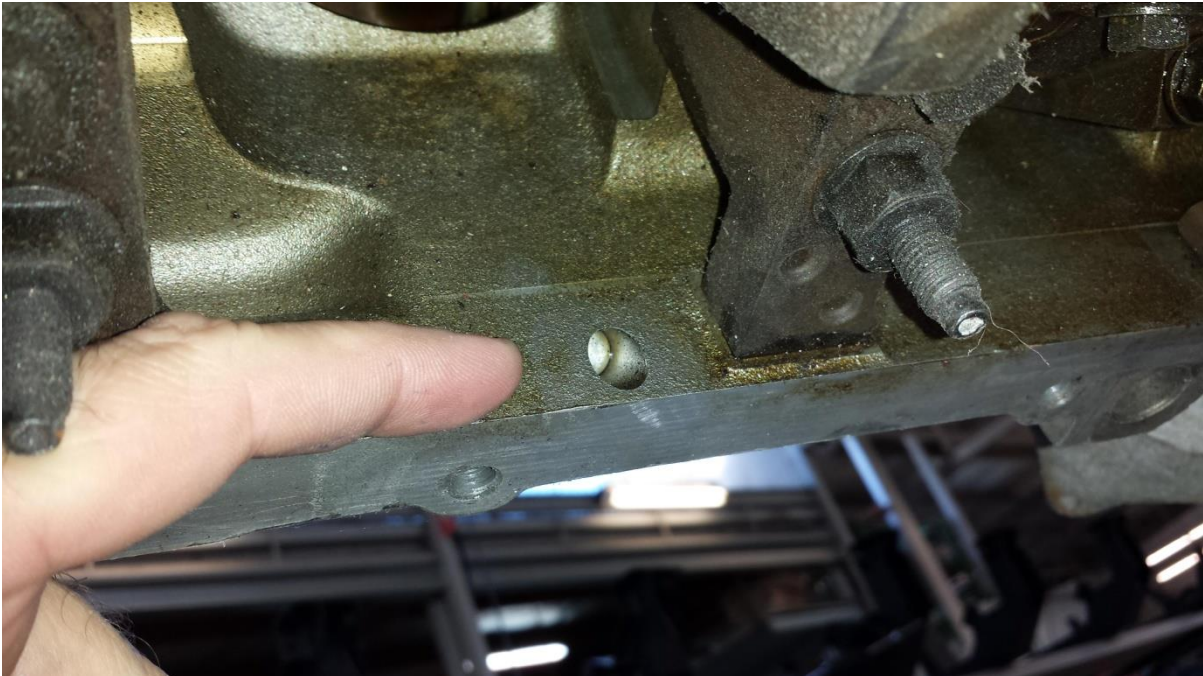

This can be done by knocking it out with a pin punch and hammer. (best done when the sump is off)

